## Safety precautions and maintenance

- 1. Unplug themoniter before cleaning clean with a slightly damp cloth. wiping the screen with a dry cloth is okay when the power is off. however never use alcohol or ammonia-based liquids.
- 2. There are cooler hole design on the cabinet back, please do not cover or wall it up, also do not lay the monitor near the electric heater or heater, including not airiness setting place.
- 3. Please do not insert any matter or spray any liquid on it.
- 4. Please do not lay it on the unsafe space, if it falls down, it may be shatter strictness, or it may hurt the user.
- 5. Unplug the monitor if you are not going to use it for an extended period of time.
- 6. Please do not put heavy on the monitor, electric cord or upper power.
- 7. Please do not open the monitor back cover voluntarily because the monitor is including high voltage part.

# Catalogue

Security matter ·······1
Basic instruction ····································
Setup guide 3
Adjustment setting ···· 4
Trouble shooting ····· 8
Specification 10

## Warring

If the monitor has DVI function, please turning off the monitor first, when you want to exchange the DVI signal cord.

### **Basic instruction**

### **Equipment subassembly**

Please check your monitor equipment subassembly including the followings:

- \*A piece of monitor and a piece of signal cord
- \*A piece of power cord.
- \* A set of warranty card and eligibility certificate.
- \* A set of user instruction.
- \* A piece of audio cord.(just for monitor with audio)
- \* Apiece of DVI signal cord(just for monitor with DVI)

### **FUNCTION**

#### TFT-LCD MONITOR HAS THE FOLLOWING CHARACTERS:

\* No radiation, protect your health.

Save space

TFT-LCD monitor is more thickness, it can save more space on the desk.

\*Save more power.

The product maximum power consuming is only 35w.

\* Smart model image screen setting
View window of smart model controls the interface to make
easy setting and offering high-tech enjoyment.

\*High quality image


This product best working model:1280×1024@75Hz

- \* 16.2M high quality image color this product specially emphasizes view effect, to provide perfect image resolution
- \* Auto function

When no menu please press Exit function key, it automatically adjust the signal to the best statement setting.

## Setup guide

- 1. To inert the signal cord to the back side of PC signal tie in.
- 2. The monitor have wider power voltage range, it can be used in AC 100-240 50/60Hz area.
- 3. To switch on the PC and press monitor power on/off key.

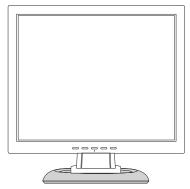

(Please consult the real model in order of key)

### Power indicator light

- \* Blue (green)light expresses power on
- \* Blue (green)light expresses the signal is under normal working model
- \* Blue (green)flash express the signal not input statement

Screen image adjustment

To through five keys of control panel to adjust the monitor setting by view of control interface.

The key of control broad

Menu /Enter: Shows main choice menus

- ▼ To adjust the option column down or lower
- ▲ To adjust the option column up or higher,

EXIT: Exit main menu, when no menus, auto adjust image..

# Adjustment setting

- 1. Press menu into main function choice menu
- 2. Press ▲or ▼to switch the image of main function changing setting.
- 3. Press menu to switch to submenu changing setting ,To press ▲ or ▼ into this menu.
- 1. Press ▲or ▼ to adjust the setting
- 2. Press Exit to return back main menu

#### Main choice menu with VGA

A: PC main menu item including:

- 1. Color adjust
- 2. Image adjust
- 3. Color Temp.t
- 4、OSD Tools
- 5. Language
- 6, MISC.


## 

## All kinds of functions particular instruction

## 1. Color adjustment

1.1.Brightness adjustment

To press menu into main choice menus ,press Menu into brightn -ess adjustment ,and then, press

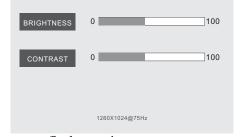

 $\Delta$  or  $\nabla$  to adjust the image brightness to fit the environment

1.2. Contrast adjustment

To press menu into main choice menus ,press Menu into contrast adjustment ,and then, press ▲or ▼ to adjust the image to obtain the best display

# 2. Image adjustment

 $\begin{tabular}{ll} 2.1 & Horizontal position adjustment \\ No function & when the signal \\ is & DVI \end{tabular}$ 

To press menu into main choice menus, press menu into Horizon



-tal position adjustment and then press ▲ or ▼ to adjust the Horizontal position image display.

2.2 Vertical position adjustment

To press menu into main choice menus, press menu into Vertical

position adjustment, and then press ▲or▼ to adjust the Vertical position image display.

### 2.3 Phase adjustment

To press menu into main choice menus, press menu into phase adjustment, and then press ▲or▼ to start pixel sampling by ph-ase improving stabilization.

### 2.4 Colck adjustment

To press menu into main choice menus, press menu into Frequ -ency adjustment, and then press ▲or▼ to adjust colck image display to track stability.

## 3. Color temp.

3.1. Color temperature adjustment
To press menu into choice men
-us ,press ▲ or ▼ to this choice ,
and then press menu into color



temperature to choose the standard warm or cool to adjust the image to obtain the best display .

#### 3.2.User Defined

To press menu into choice menus ,press menu into color adjustment , and then press  $\triangle$  or  $\nabla$  into color temprature menu ,press menu into the color adjustment of red  $\nabla$  green  $\nabla$  blue.

## 4. OSD Tools adjustment

4.1. OSD H-position adjustment
To press menu into main choice
menus, press menu into OSD Hposition adjustment to adjust the
H-position image display.



### 4.2. OSD V-position adjustment

To press menu into main choice menus, press menu into OSD V-position adjustment to adjust the V-position image display.

## 5. Language

### 5.1, OSD choice language setting

To press menu into main choice menus, press menu into OSD choice language setting, and then press ▲or▼ to select menu language.

## This product has six or ten language


English Spanish French Italian Deutsch 中文

MORE: Russian Poland 繁体中文 Korean (Please consult the real model in order of the language)

### 6, MISC.

### 6.1 Auto Configuration

To press menu into main choice menus, press menu into auto adjustment to adjust to best display. (No function, when the signal is DVI)

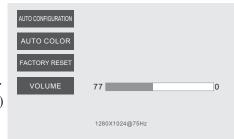

#### 6.2 Auto Color

To press menu into main choice menus, press menu into auto adjustment to adjust color to best display.

(No function, when the signal is DVI)

#### 6.3 Factory Reset

To press menu into main choice menus, press menu into this choice to get back to factory setting.

#### 6.4 Volume

To press menu into main choice menus, press menu into this choice and then press ▲or▼ to adjust volume. (just for monitor with audio)

## **Trouble shooting**

### No image on screen

- 1. Check the power button is switched on.
- 2. Verify brightness and contrast setting of the moniter.
- 3. Check TFT-LCD monitor is under non-input signal or not, if under non-input signal, the power indicator light will flash.
- 4. if signal indicator is note book, please make sure that the signal has been switched to out connect screen model or not

#### Non-focus image

1. To check the image signal cord is inserted right position or not.

#### Flash screen

- 1. The power is not enough, to connect the monitor to other plug.
- 2. To get rid of matter to make magnetic field around the monitor, such as radion, not cover speaker, fluorescence light, ac trans-former, table fans etc.
- 3. Press Exit key, auto adjust image to improve image quality.

#### Wrong or unusual color

- 1. If red, green, blue, anyone of color disappear, shall check the view cord is connected all right or not . If the pin inside the plug of electric cord is loose, it will occur bad connection.
- 2. To connect the monitor to another PC to try

### The whole screen appear up and down H-rolling scan

- 1. To make sure the view of input signal is within the order (60-75 Hz) of the monitor
- 2. To connect the view cord close

#### How to clean the monitor

- 1. To make sure the monitor switch off.
- 2. To not spray any liquid on the screen or plastic PC directly.

#### When clean the screen

- 1. Please use clean, soft and no fur cloth to clean the screen.
- 2. If it is still dirty, please add a little of non-ammonia liquid and non-alcohol glass cleanser to clean the screen

#### When clean the cabinet

- 1. To use soft dry cloth
- 2. To add a little of non-ammonia liquid and non-alcohol of non-abrasion cleanser to clean surface if it is still unclean.

# Specification form

### Specification form

Brightness	$\geq 250 \text{cd/m}^2$
Color	16.2M
Viewing angle	H:L80-R80 V:Up80-Down80
Resolution	1280×1024
H-frequency	30~80KHz
V-frequency	55~76Hz
Power input	AC100V-240V
Power	≤35W
	Operation Temp 0°C -40°C
Environment	Humidity 20% - 80%
	Storage Temp -20 C -60 C
	Humidity 10% - 90%

This product best working mode:  $1280 \times 1024 @ 75 \text{Hz}$ 

#### NOTES:

- 1. The notes included are for indication only. Pls. refer to final products.
- 2. New narration will not be showed in the manual if the product changes are based on quality improvement.